

# available symbols - funzioni presenti nel telecomando - fonctions présentes sur la télécommande auf der Fernsteuerung vorhandene Funktionen - funciones presentes en el mando

	TV	SHIFT+ TV	SAT/DTT	SHIFT+ SAT/DTT	DVD	SHIFT+ DVD
POWER 	POWER ON/OFF	POWER DVD TIMER	POWER ON/OFF	POWER TV TIMER	POWER ON/OFF	POWER TV TIMER
SHIFT						
<b>1</b>	<b>1</b> .,?	X	<b>1</b> .,?	2.1	<b>1</b> .,?	2.1 DISC 1
<b>2</b>	<b>2</b> abc	⇄	<b>2</b> abc	2.1	<b>2</b> abc	DISC 2
<b>3</b>	<b>3</b> def	X	<b>3</b> def	CLOCK	<b>3</b> def	DISC 3
<b>4</b>	<b>4</b> ghi	i	<b>4</b> ghi	PIP	<b>4</b> ghi	DISC 4
<b>5</b>	<b>5</b> jkl	↗	<b>5</b> jkl	SWAP	<b>5</b> jkl	DISC 5
<b>6</b>	<b>6</b> mno	⌚	<b>6</b> mno	TIMER	<b>6</b> mno	DISC 6
<b>7</b>	<b>7</b> pqrs	+	<b>7</b> pqrs	STORE	<b>7</b> pqrs	DISC 7
<b>8</b>	<b>8</b> tuv	↗	<b>8</b> tuv	STORE	<b>8</b> tuv	DISC 8
<b>9</b>	<b>9</b> wxyz	?	<b>9</b> wxyz	REVEAL	<b>9</b> wxyz	DISC 9
<b>GUIDE</b>	GUIDE  1/10	I/II SEARCH	GUIDE EPG	SEARCH	GUIDE EPG	SEARCH
<b>0</b>	<b>0</b>	16/9	<b>0</b>	REVEAL	<b>0</b>	DISC 0
<b>SUBTITLE</b>	SUBTITLE  2/20	#	SUBTITLE  2/20	#	SUBTITLE  2/20	#
<b>+ VOL -</b>	<b>+ VOL -</b>	TONE+ TRACK+ TONE- TRACK-	<b>+ VOL -</b>	TONE+ TRACK+ TONE- TRACK-	<b>+ VOL -</b>	TONE+ TRACK+ TONE- TRACK-
SMART	SMART  APP NETFLIX HOME	SIZE MEDIA YOUTUBE	MEDIA MODE INTERATTIVI	APP MOVE YOUTUBE	MEDIA MODE INTERNET	SIZE MEDIA YOUTUBE
<b>MENU</b>	MENU HOME MODE RDS	Q. MENU MEDIA	MENU HOME MODE RDS	Q. MENU MEDIA	MENU HOME MODE RDS	Q. MENU MEDIA
<b>CH CH/PR</b>	<b>CH CH/PR</b>	PAGE+ INDEX+ PAGE- INDEX-	<b>CH/PR</b>	PAGE+ INDEX+ PAGE- INDEX-	<b>CH/PR</b>	TONE+ ECHO+ TONE- ECHO-
	MUTE AUDIO OFF	SURROUND AUDIO SOUND	MUTE AUDIO OFF	SURROUND AUDIO SOUND	MUTE AUDIO OFF	SURROUND AUDIO SOUND
<b>NETFLIX</b>	NETFLIX TXT SLEEP	SLEEP DISPLAY	TELETEXT TXT FAVORITE	SLEEP DISPLAY	<b>NETFLIX</b> FREEZE TIMER	SLEEP DISPLAY

	TV	SHIFT+ TV	SAT/DTT	SHIFT+ SAT/DTT	DVD	SHIFT+ DVD
YouTube 	YouTube @TV DISPLAY	PICTURE 3D VIDEO DTV	SAT TV/RADIO TV DISPLAY	PICTURE VIDEO	TV TV/RADIO HDD DVD	PICTURE VIDEO 3D
LISTE	LISTE TITLE FAVORITE	LANGUAGE TIMER PROG	LISTE LANGUAGE TITLE FAVORITE	LANGUAGE TIMER PROG	LISTE LANGUAGE TITLE FAVORITE	LANGUAGE TIMER PROG
<b>TOOLS</b>	TOOLS ASPECT SYSTEM OPTION	SETUP SERVICE BOOKMARK	TOOLS HELP USB OPTION	SETUP SERVICE BOOKMARK	TOOLS ASPECT USB HDD	SETUP GO-TO WIDE MARK
<b>INFO</b>	INFO INDEX DISPLAY SEARCH	DISPLAY STATUS S.MODE PVR	INFO INDEX INTRO SEARCH	DISPLAY STATUS S.MODE PVR	INFO INDEX CLEAR SEARCH	CLEAR STATUS S.MODE PVR
	UP	FAV+ PAGE+	UP	FAV+ PAGE+	UP	TUNE+ PAGE+
	LEFT	INDEX- TUNE-	LEFT	INDEX- TUNE-	LEFT	INDEX- TUNE-
	RIGHT	INDEX+ TUNE+	RIGHT	INDEX+ TUNE+	RIGHT	INDEX+ TUNE+
	DOWN	FAV- PAGE-	DOWN	FAV- PAGE-	DOWN	TUNE- PAGE-
<b>OK</b>	OK NORM ENTER	ZOOM NORM ENTER	OK ENTER	ZOOM ENTER	OK PLAY ENTER	ZOOM SLOW ENTER
<b>RETURN</b>	RETURN BACK PROG. PREV	RECALL REPLAY	RETURN BACK RECALL	RECALL REPLAY	RETURN BACK RECALL REPEAT	REPEAT REPEAT A-B
<b>EXIT</b>	EXIT RETURN	RESET DELETE	EXIT RETURN	RESET DELETE	EXIT RECALL RETURN	RESET REPEAT A-B
	RED	SIZE STILL SWAP PIP	RED	SIZE SCAN SWAP ADD	RED	SIZE GAME SWAP A-B
	GREEN	WEST NOTE	GREEN	WEST NOTE	GREEN	WEST NOTE
	YELLOW	3D SIZE HELP	YELLOW	3D SIZE HELP	YELLOW	3D MARK ERASE
	BLUE	STORE ADD WIDE	BLUE	HDD ADD WIDE	BLUE	HDD ADD KEY
	REWIND PREVIOUS	PREV SLOW	REWIND PREVIOUS	PREV SLOW	REWIND PREVIOUS	PREV SLOW
	PAUSE AUDIO	SLOW SOUND	PAUSE AUDIO	SLOW SOUND	PAUSE AUDIO	SLOW SOUND
	PLAY	SLOW	PLAY	SLOW	PLAY	SLOW
	NEXT FORWARD	NEXT SLOW	NEXT FORWARD	NEXT SLOW	NEXT FORWARD	NEXT SLOW
	RECORD	TIMER RECORD	RECORD	TIMER RECORD	RECORD	TIMER RECORD
	STOP	STOP 2 IMAGE	STOP	STOP 2 IMAGE	STOP	STOP 2 IMAGE
	SOURCE TV/AV SCART	USB HDMI EJECT	SKY USB SAT	HDMI AUX RADIO HDD	EJECT USB OPEN/CLOSE	HDMI AUX RADIO HDD